


# Bevelled Edge Mirrors


## Installation Instructions

CASA LUSSO


1 - 2

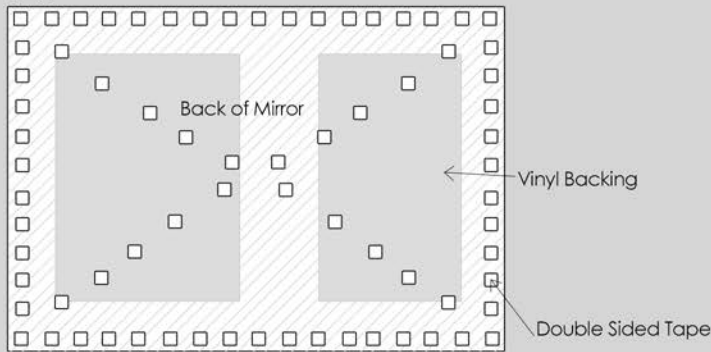


3

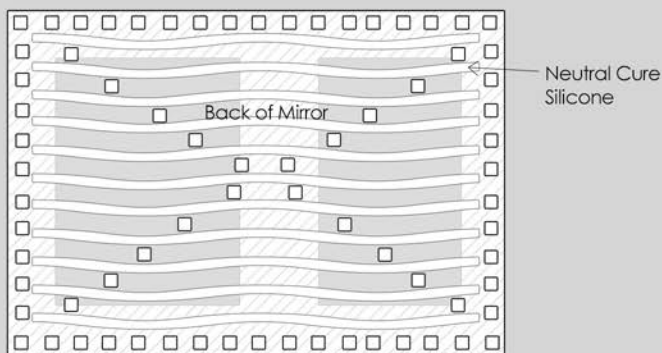

4

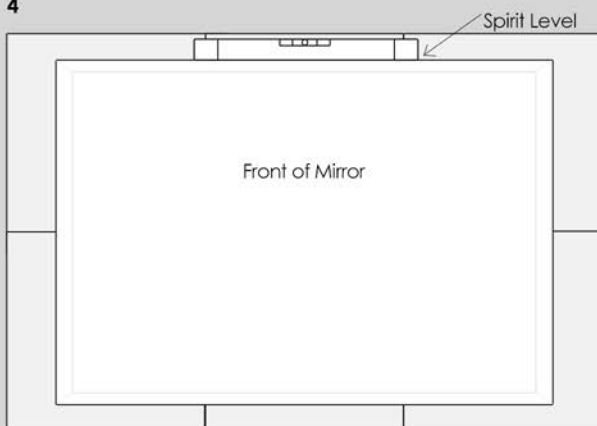

5 - 6

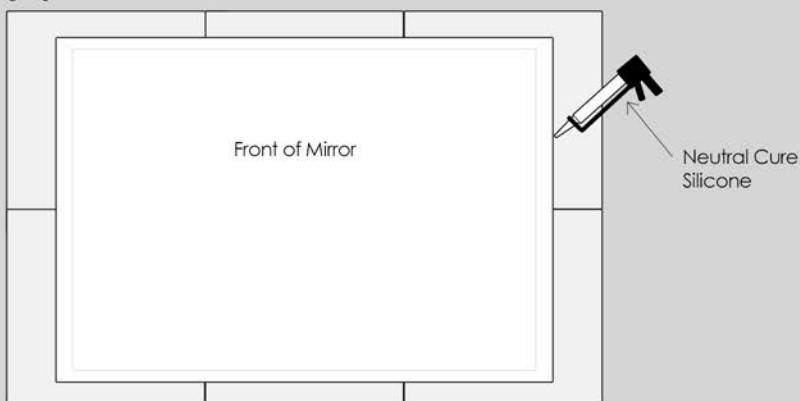

## Installation Instructions

### Mirrors

1. Ensure the back of the mirror and the wall surface are flat and free of dust.  
**Note:** Please make sure you do not install mirrors on freshly painted walls, within 14 days of painting.
2. If using double sided tape, apply Double Sided Tape around the perimeter and through the centre of the mirror. Make sure tape is set 10mm in from edge.
3. Apply a thick bead of Neutral Cure Silicone\* around mirror being careful not to be too close to tape to avoid silicone spreading onto the tape rendering it ineffective. Make sure silicone is on both vinyl and non-vinyl areas and exceeds the depth of the tape so it makes contact and spreads as the mirror is pressed onto the wall.  
**Note:** Please check Neutral Cure Silicone for curing times to determine when Steps 5-6 may be completed.
4. Using a Spirit Level, place mirror on wall applying pressure to all areas.
5. To increase the life of the mirror seal around the edge of the mirror next day so that the internal silicone has a chance to cure.
6. If not using Double Sided Tape, delete step 2 of steps 1-5. Prop mirror for 48 hours to avoid movement.

**\*Please note** - Use a Silicon that specifically states "Suitable for Mirrors".

Due to our policy of continuous development, all designs and measurements are intended only as a guide and are subject to change without notice. Being hand made products they are subject to a size variance E&OE. This brochure is representative of the actual products at time of printing. Please confirm all particulars before purchase. Casa Lusso recommends having the product on site before commencing rough in.