

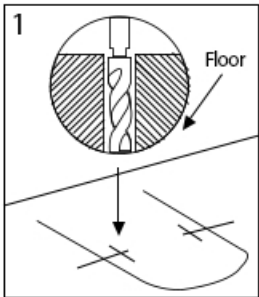
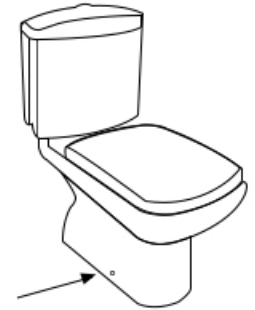
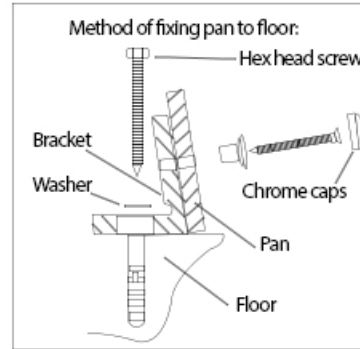


Installation


- | | |
|---|-------------------------|
| 1 | 2x Floor brackets |
| 2 | 2x Wall plugs S10x50 |
| 3 | 2x Hex head screw 6x60 |
| 4 | 2x Washes |
| 5 | 2x St. Steel Screw 5x60 |
| 6 | 2x Nylon bushes |
| 7 | 2x Chrome caps |

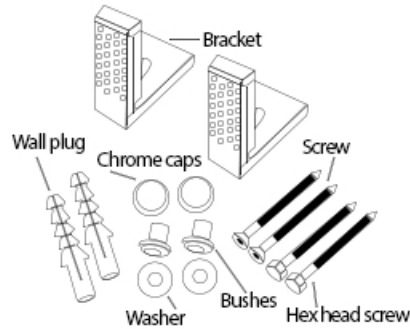


1 Drill 10mm Diameter hole minimum of 60mm deep into the floor

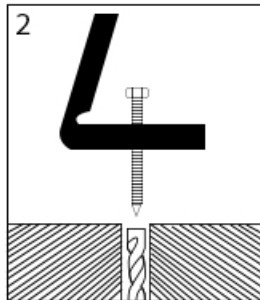


2 Fix brackets (1) to the floor

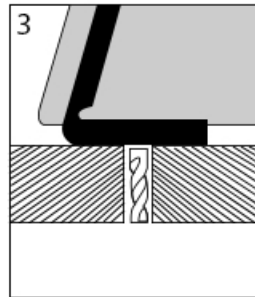

3 Install the toilet

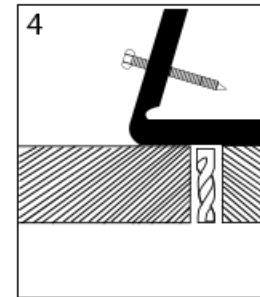

4 Tighten screws (5) to bracket

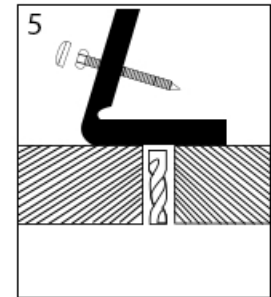

5 Install chrome caps